
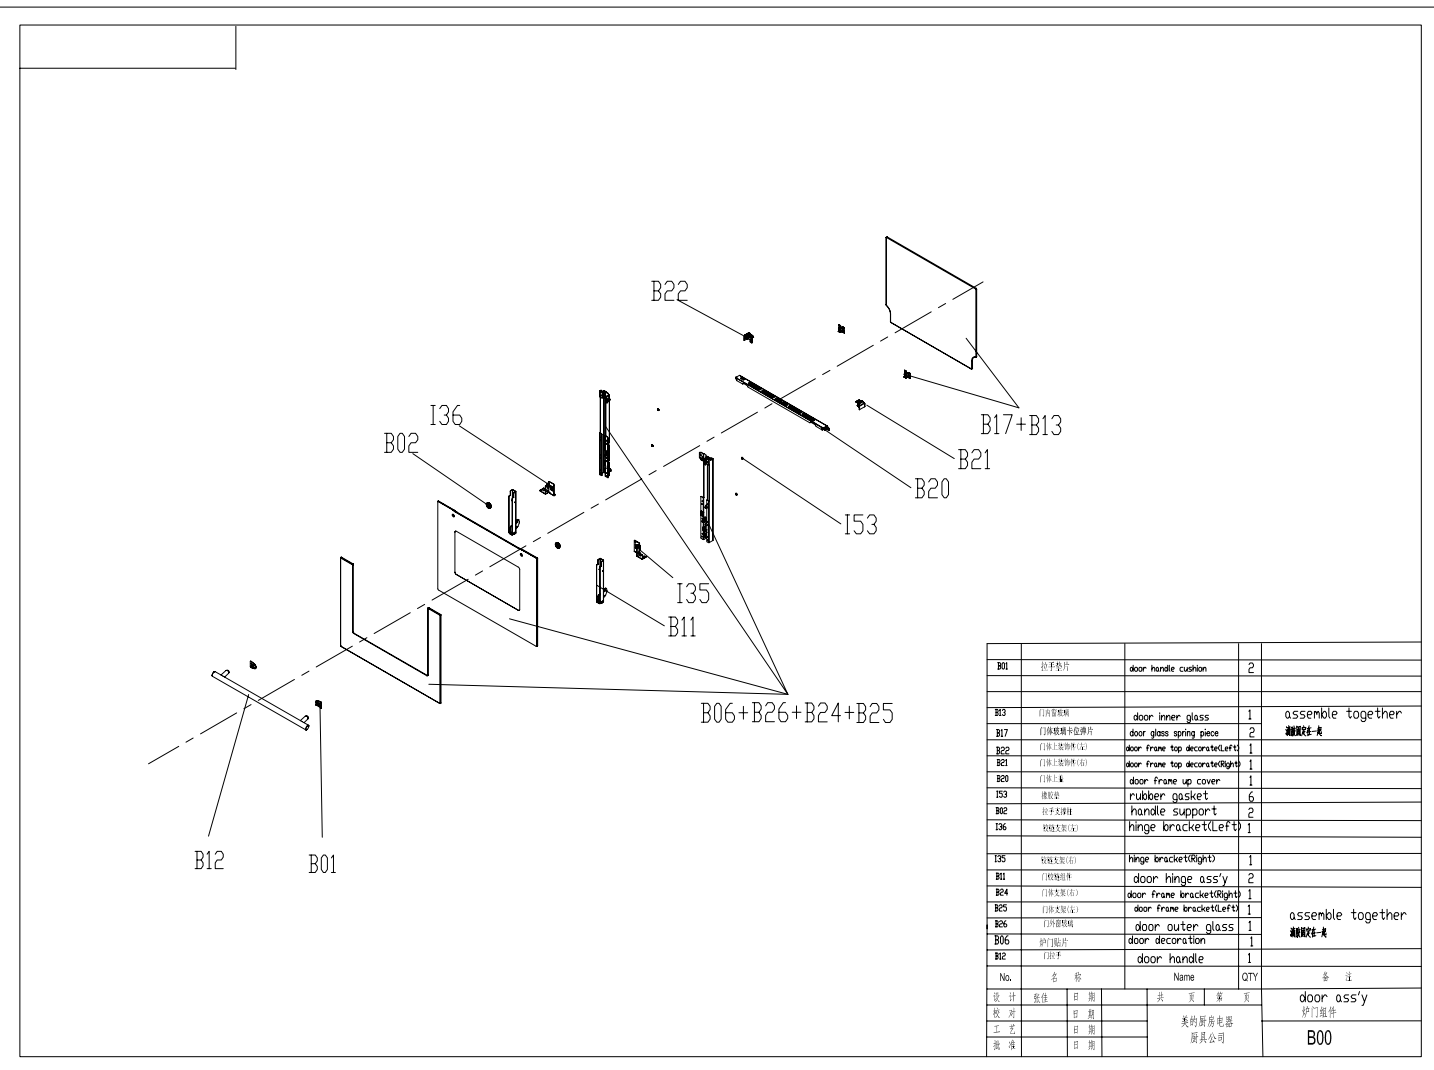


No.	名称	Name	QTY	备注
C01	显示屏	film of control panel	1	
H01	显示屏	display board	1	
C06	显示屏	display bracket	1	
C09	显示屏	skirt crimp	1	
C03	显示屏	button sheet	4	
C02	显示屏	button bracket	2	
C11	显示屏	control panel holder	1	
I07	显示屏	stator	2	
C17	显示屏	control panel bracket	2	assemble together
C08	显示屏	control panel glass	1	玻璃片
C05	显示屏	control panel decoration	1	
C02	显示屏	control panel sponge	2	
C01	显示屏	control panel	1	
C02	显示屏	button	4	
C02	显示屏	Knob Assembly	2	
美的厨房电器 厨具公司				
control panel ass'y 控制板组件				
A00				

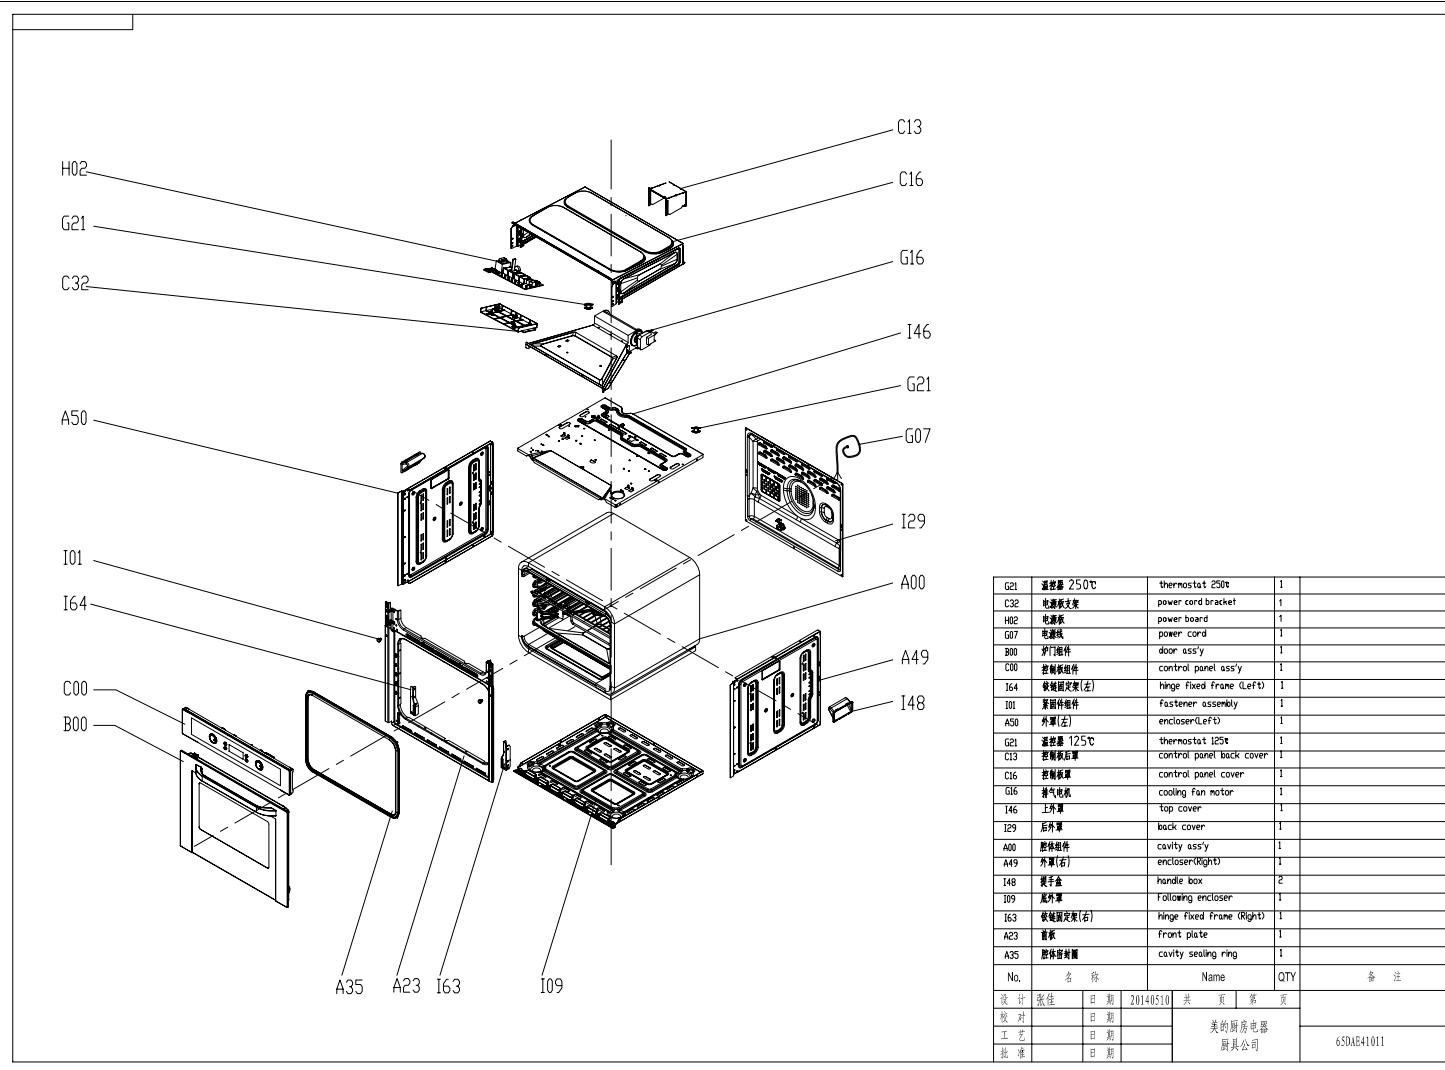

No.	名称	Name	QTY	备注
B01	把手垫片	door handle cushion	2	
B03	内层玻璃	door inner glass	1	assemble together
B17	玻璃弹簧片	door glass spring piece	2	玻璃片
B22	门框上装饰件(左)	door frame top decorate(Left)	1	
B21	门框上装饰件(右)	door frame top decorate(Right)	1	
B09	门框上盖	door frame up cover	1	
I53	密封胶	rubber gasket	6	
B06	把手支架	handle support	2	
I36	铰链固定架(左)	hinge bracket(Left)	1	
I35	铰链固定架(右)	hinge bracket(Right)	1	
B01	铰链组件	door hinge ass'y	2	
B04	门框铰链(左)	door frame bracket(Left)	1	
B05	门框铰链(右)	door frame bracket(Right)	1	
B06	门框玻璃	door outer glass	1	assemble together
B06	门框装饰	door decoration	1	玻璃片
B02	把手	door handle	1	
美的厨房电器 厨具公司				
door ass'y 炉门组件				
A00				